LIGHTOLIER®
45 Industrial Way, Wilmington, MA 01887 (978) 657-7600 • Fax (978) 658-0595
We reserve the right to change details of design, materials and finish. www.lightolier.com
This product may have a mercury containing lamp. Manage in acco dance
with Disposal Laws. See: www.lamprecycle.o g

Coffaire Drop Basket

Installation Instructions
Standard or Slot Grid Ceiling Systems

1 DIMENSIONS

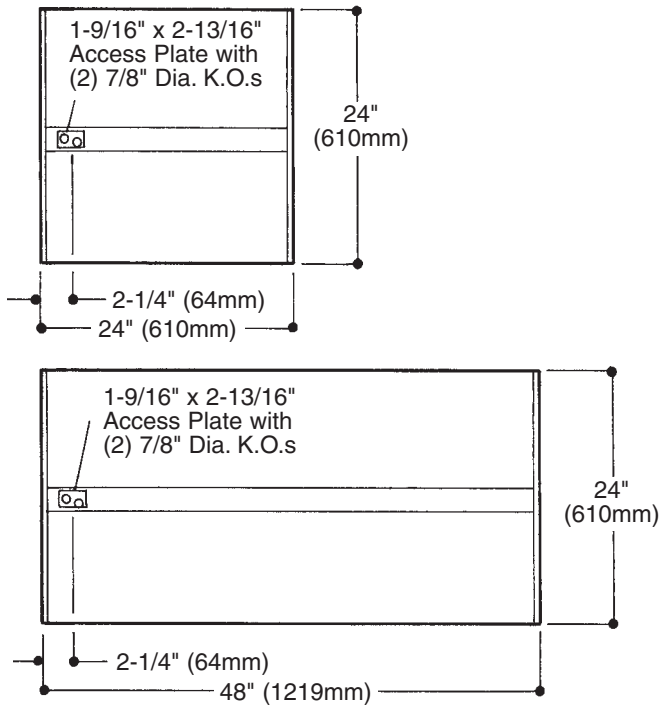

2 BASKET

Remove Basket by pulling on one side (both ends) clearing the Hinge Pins. Rotate the Basket up and clear the Hinge Pins on the opposite side. To install the Basket, reverse the instructions.

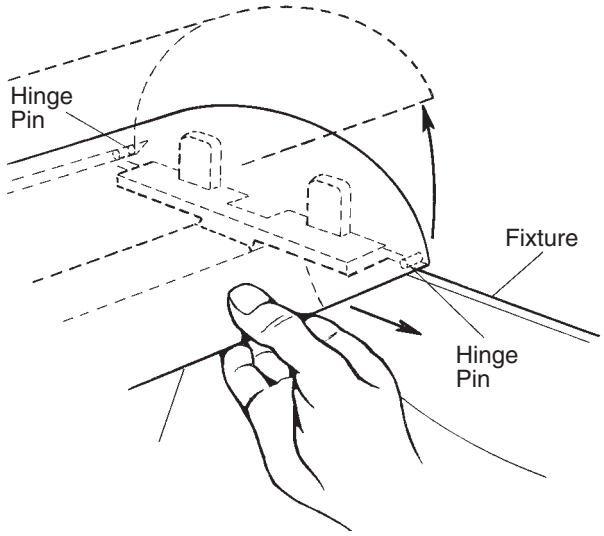

3 BALLAST COVER

To remove Ballast Cover, loosen or remove screw. Ballast Cover has a keyhole slot at opposite end.

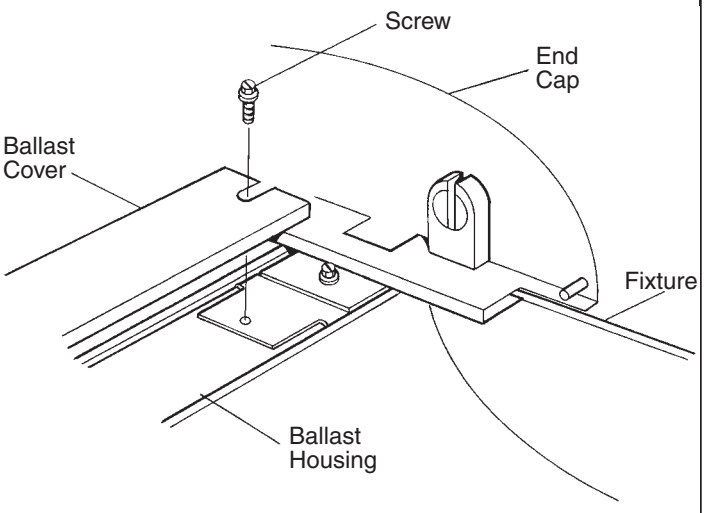

4 END CAPS (T8 ONLY)

Rotate End Cap down (both ends) to clear ceiling opening during installation into the ceiling system.

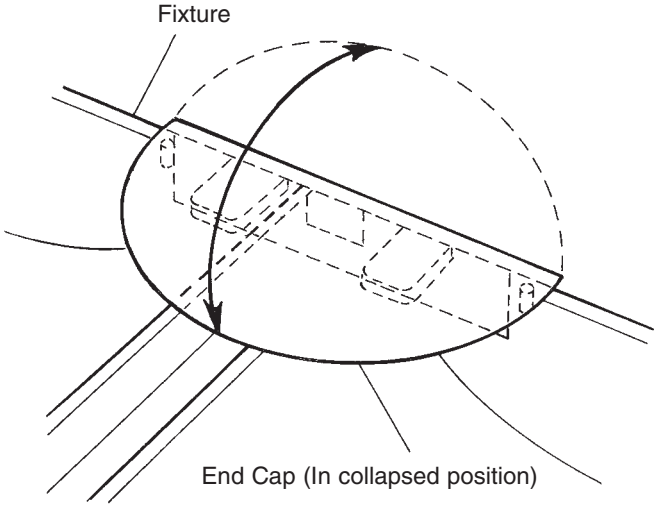

5 FIXTURE INSTALLATION

Angle Fixture up into ceiling opening resting Fixture on Ceiling Tee (by others). Return End Caps to open position (Detail A, T8 Only) for lamping and installation of Perforated Basket. Make wiring connections.

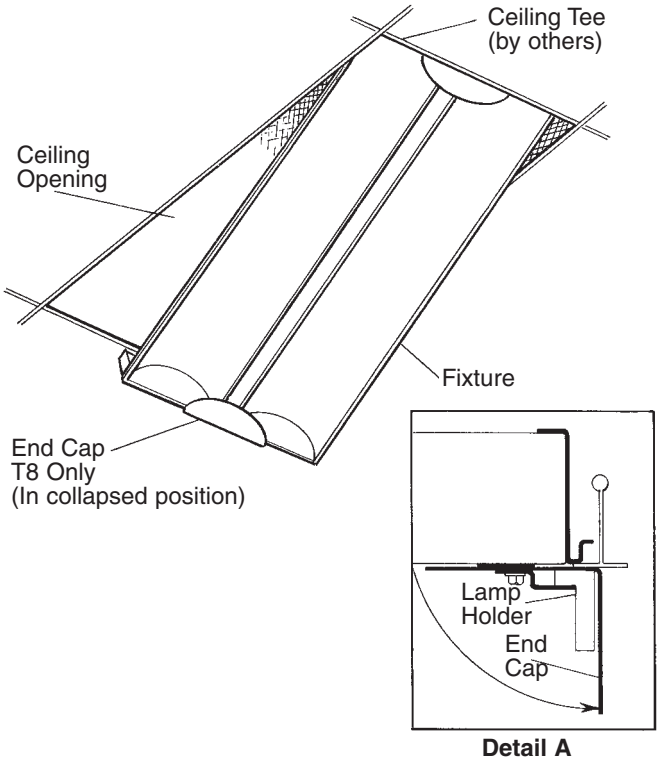

Detail A

6 EARTHQUAKE CLIP (For 2' x 2' / 2' x 4' only)

With Screw secure Earthquake Clip to Fixture with Ceiling Tee (by others) between Earthquake Clip and Fixture as shown.

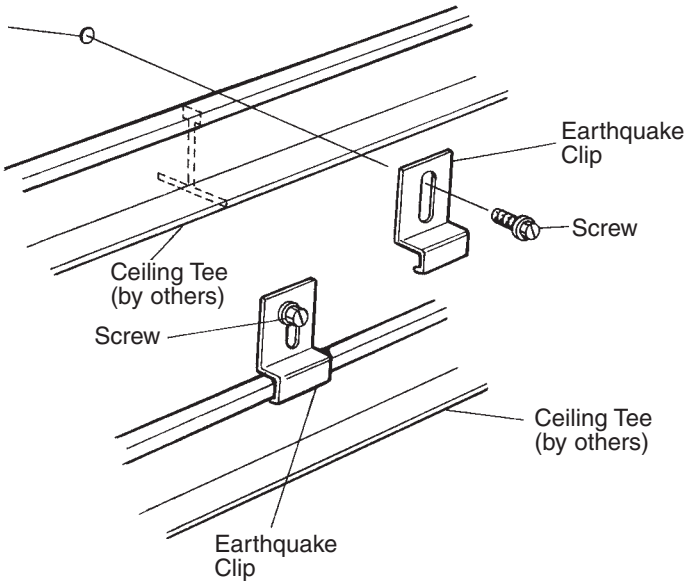

7 ACCESS PLATE

Remove Access Plate, when desired by sliding Access Plate in the direction of Arrow 1. Lift up and slide Access Plate in the direction of Arrow 2. Bend Housing Tab up out of Ballast Housing, make ground connection. Bend Ballast Housing Tab back to original position. Replace Access Plate by reversing the removal instructions.

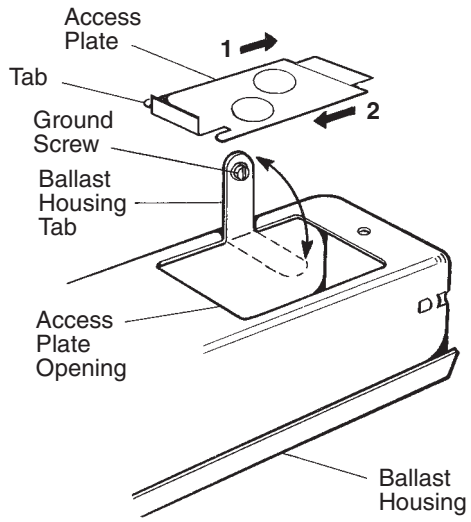

59-31165-000 Printed in U.S.A.